

57106

Instruction Manual

Thank you for your purchase of a SEA&SEA product. For proper operation of the product and safe handling, please read the following instructions carefully before use. This manual should be retained for future reference.

Safety Precautions

Failure to heed the precautions listed below could result in serious consequences. To prevent injury or damage to yourself and/or others, please observe the precautions as they contain highly important information related to personal and product safety.

- ⚠ DANGER** : Situations that involve a high risk of severe injury or death.
- ⚠ WARNING** : Situations that could result in severe injury or death.
- ⚠ CAUTION** : Situations that could result in property damage or personal injury.

⚠ DANGER

- Never attempt to disassemble, repair or alter the product yourself to prevent significant electrical hazard due to the high voltage circuitry in the product. Do not heat the product or put it into a fire, this could result in explosion or fire.

⚠ WARNING

- Operate this charger only with the specified electrical voltage. Use with the incorrect voltage may cause malfunction or fire.
- Should you notice smoke or an unusual smell coming from the product, disconnect the power plug and take the product to an authorized SEA&SEA service center for inspection.
- Never connect this charger to an unspecified product. Doing so may result in malfunction or fire.
- Do not rest heavy weight on the any cords/ Do not damage the cords/ Never to attempt to disassemble/ Repair or alter the product yourself. It may cause fire or electronic shock.
- Pull out power supply cord in periodically, and wipe any dust with a clean dry cloth.
- Do not put ON and OFF the electronic plugs with wet hands, it may cause fire and electronic shock.

⚠ CAUTION

- Read the instruction manuals of the battery unit and battery charger for LX-24HID, and observe proper precautions before use of the products.
- Do not use this product in direct sunlight, in extremely hot or cold environments, in humid, dusty or wet environments.
- After use, always disconnect the plug from the electrical outlet. Do not pull, bend or twist the cord; damage to the wiring may cause malfunction, electric shock or fire.
- Never short-circuit the terminals of battery installed in the products. It may cause malfunction, electric shock or fire.
- Keep this charger unplugged when not in use.
- Do not cover or wrap the product with a cloth. This could result in deformation of the product or in fire.
- Never use chemicals, cosmetics, any petroleum solvents such as paint thinner, or neutral detergent on the product. They may deform and damage the product.
- Do not store the product in wet or high humidity place, to avoid mold, rust, corrosion or malfunction.

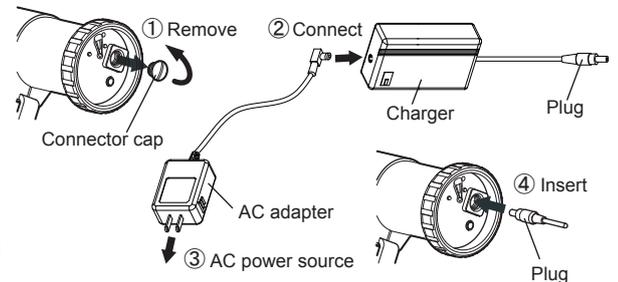
How to Use

- 1 Loosen and remove the connector cap ① from the battery unit by rotating it counterclockwise using a coin, and securely connect the AC adapter and the charger ②

- Thoroughly wipe off any water remaining in the connector.

- 2 Connect the AC adapter to an AC power source first ③, then insert the charger's plug into the connector ④

- The LED lamp of the battery charger lights up green, and the color of the lamp turns red when charging.
- Charging is complete when the LED lamp on the battery charger turns green. Unplug the battery charger from the battery unit.

**⚠ CAUTION**

- This product must be connected to a SEA&SEA Battery Unit for LX-24HID (57107).
- Make sure that the power switch of the battery unit for LX-24HID is set to OFF before charging. The battery cannot be charged if the power switch is set to ON. Plugging and unplugging the battery charger to the connector without the switch OFF may cause damage to the equipment.
- Do not store the product with the charger plugged into the battery unit, as it may cause damage to the equipment.
- Do not plug the charger to the battery unit before the AC adapter is connected to an AC power source, as it may cause damage to the equipment.
- Be careful when touching the battery unit and the battery charger during charging. They may get hot enough to burn you.
- Charging should be done on a flat surface free from vibration. Vibration during charging may cause malfunction.
- Hold and pull the plug when unplugging the charger from the connector. Pulling the cord may damage the wiring and result in malfunction.
- Do not cover or wrap the battery unit and the battery charger with a cloth when charging, as it may cause heat generation and result in malfunction.
- The battery unit will be very hot immediately after use. Wait until it cools down to normal temperature before recharging.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, (2) this device must accept any interference received, including interference that cause undesired operation.

Specifications

| | | | |
|-------------------------|-------------------|---------------------|---------------------------------------|
| 【Rated input】 | AC 100-240V | 【Construction】 | ABS resin |
| 【Rated output】 | DC 18V - 0.95A | 【Dimensions】(W×H×D) | AC: 60×44×27 mm / DC: 102×61×31 mm |
| 【Operating temperature】 | 0~40°C (32~104°F) | 【Weight】 | AC: Approx. 110 g / DC: Approx. 100 g |

Specifications and appearance are subject to change without notice.