

When using the YS-01 as a sub-strobe

The YS-01 can be used as a sub-strobe if it is connected through a fiber-optic cable to a main strobe that is connected to a digital camera. Please set the mode switch on the main strobe and the sub-strobe each according to the following list.

Camera	Main strobe	Sub-strobe
With pre-flash(es)	TTL <emits pre-flashes>	TTL *1 ⚡ (Manual)
	⚡ (Manual) <does not emit pre-flashes>	⚡ (Manual)
Without pre-flash	⚡ (Manual) <does not emit pre-flashes>	⚡ (Manual)

* Please refer to page E-17 of the instruction manual for the YS-01 for settings for a camera and the YS-01.

*1 When the mode switch on both the main strobe and the sub-strobe is set to [TTL], although it will depend on the shooting conditions, the sub-strobe may fire at full power. This is caused by an insufficient amount of light coming from the main strobe, accompanying the use of flash dimming functionality with the light-level control dial. In such cases, please set the light-level control dial on the main strobe to [FULL].

